

This is a guide, for repairing the stalk unit when your lights wont work no more or your wipers wont work.

Ovo je uputstvo za popravak uređaja za uključivanje svjetla i brisača, kada vam jedno ili drug one radi više.


PLEASE WORK SLOW AND CAREFUL, USE YOUR TIME TO COMPLETE YOUR PROCESS!!!!!!

MOLIM VAS DA RADITE POLAKO I PAŽLJIVO KAKO BI ZAVRŠILI PROCES POPRAVKA !!!!!!

TAKING THE STALK APART RASTAVLJANJE KUČIŠTA RUČICA

First you have to remove the screws – white arrows

Prvo izvadite vijke koji su označeni bijelim strelicama

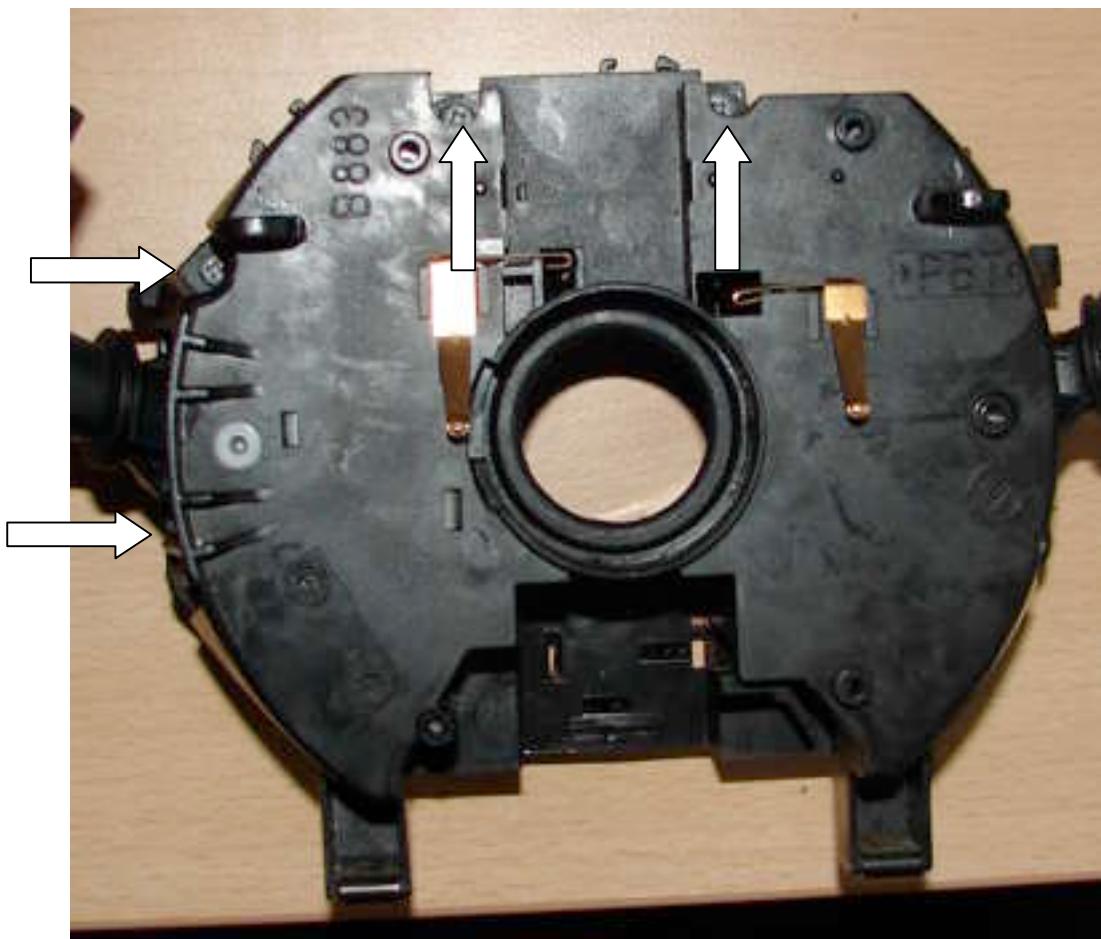

This file is for private use only, no hosting on web sites is allowed. The file is



After that you have to press the clip – yellow arrow and pull off the round clip
Nakon toga pritisnite kvačicu - žuta strelica i skinite prsten



This file is for private use only, no hosting on web sites is allowed. The file is

Then using a knife you have to prise out the clips so the upper part of the stalk can be taken off.

Nakon toga nožem odkvačite donji dio od gornjega iz ovih utora.

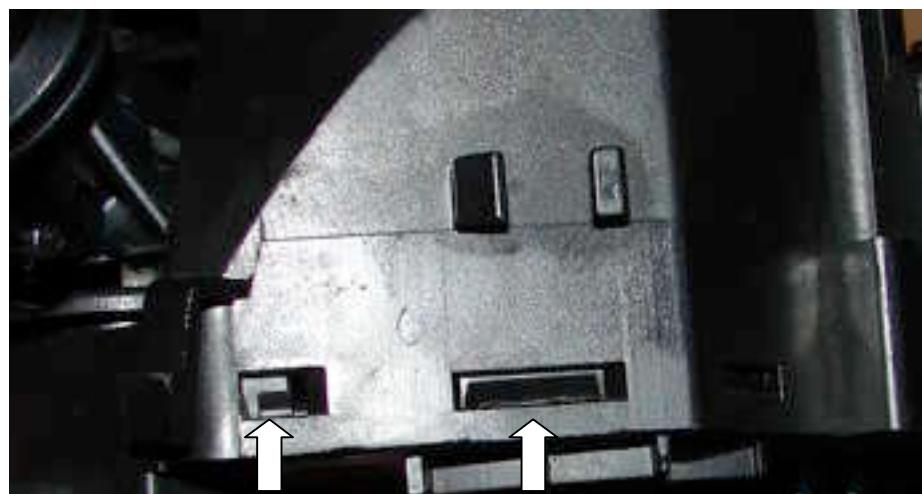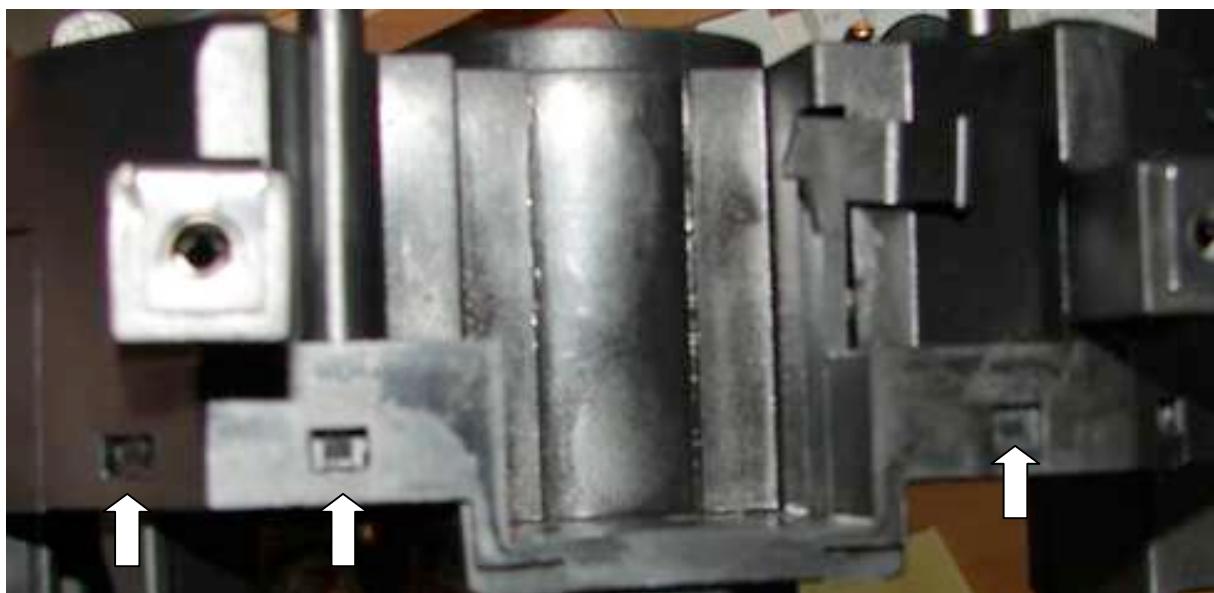


This file is for private use only, no hosting on web sites is allowed. The file is

property of  BOO-fiat bravo/a owners organization,
FIATISTA HRVATSKE and SvenJTD


KLUB

STALK REPAIR POPRAVAK RUČICA

This little slider is the problem
Ovaj klizač je problem.

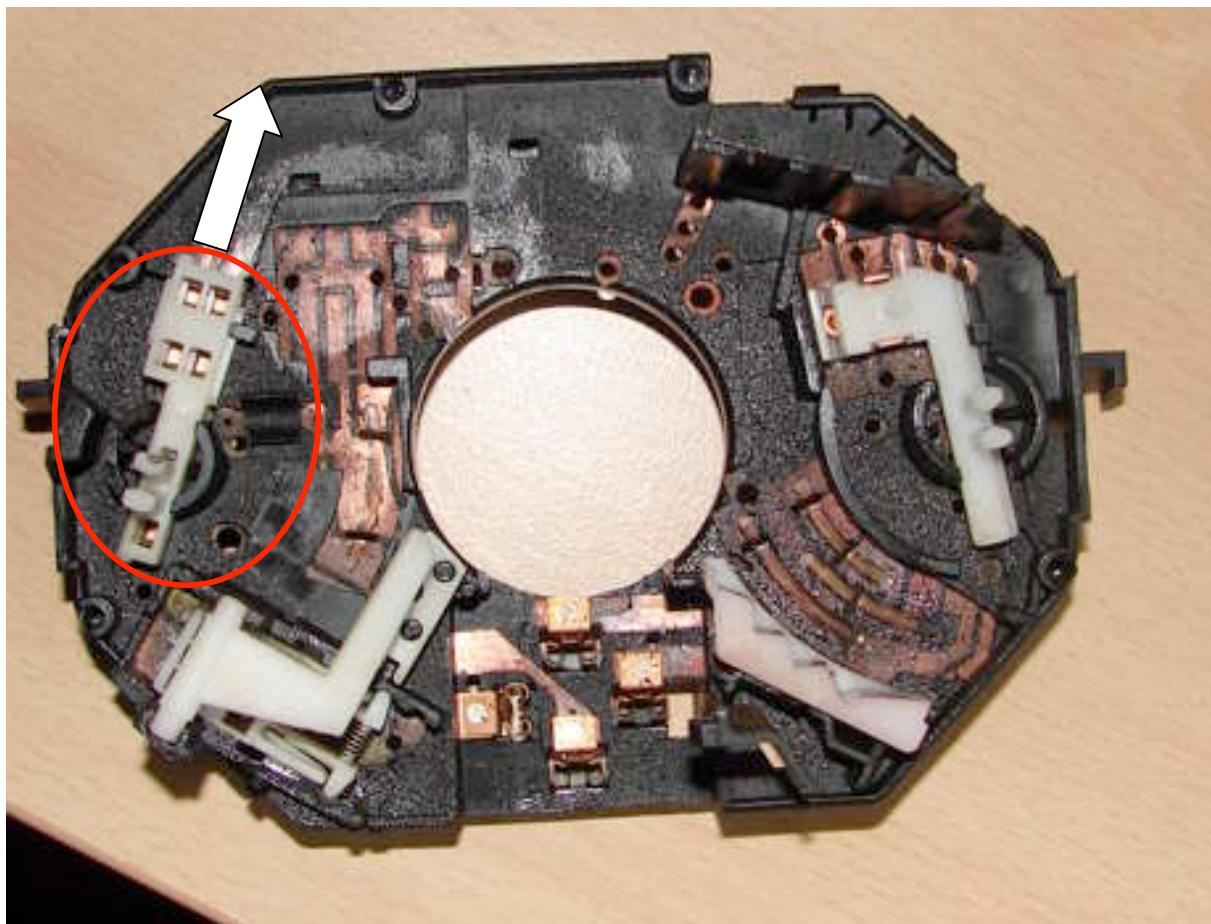

Take the slider out, sliding it in the arrow direction
Izvadite klizač van, pomicići ga u smjeru strelice

Once it is taken out, it looks like this
Nakon što je izvađen on izgleda ovako





This file is for private use only, no hosting on web sites is allowed. The file is

The reason why it wont work, is the single contact that (circled red) loses spring power and by that the connection to the board and starts to heat up till it melts the plastic around it and sticks in the melted plastic so it loses contact completley

Razlog prekida rada je u jediničnom kontaktu (zaokruženo crveno) koji izgubi silu opuge, te time i kontakt sa pločom i tim putem počne se zagrijavati dok se plastika ne počne topiti, sve dok plastika ne zablokira njegovo klizanje.

Using a knife lift the contact out of the plastic
Koristeći nož izvadite konakt van.

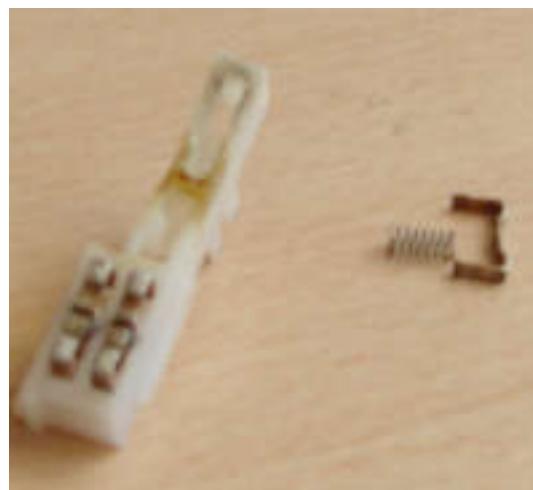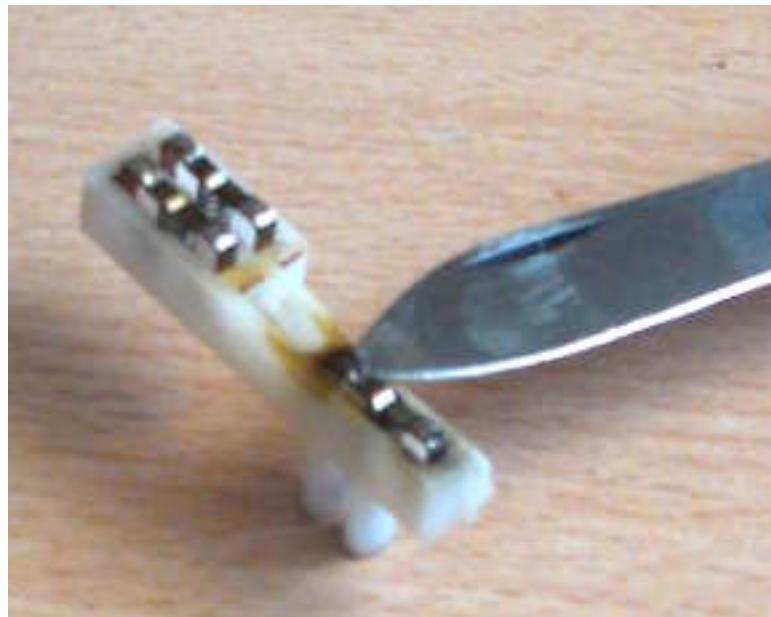


**DONT LOOSE THE SPRING UNDER THE CONTACT
NEMOJTE IZGUBITI OPRUGU KOJA JE ISPOD KONTAKTA**

This file is for private use only, no hosting on web sites is allowed. The file is


property of  BOO-flat bravo/a owners organization,
FIATISTA HRVATSKE and SvenJTD


KLUB

When its out it looks like this
Kada je izvađen zgleda ovako

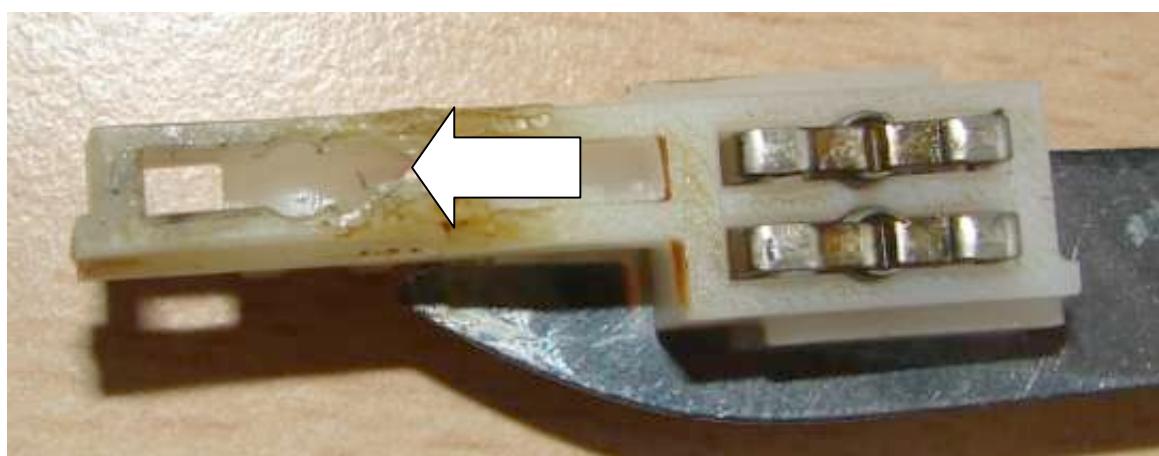

Now you have to cut out the melted part so the contact can start to move freely again
Sada je potrebno izrezati rastopljeni dio plastike, tako da se kontakt može ponovno slobodno kretati

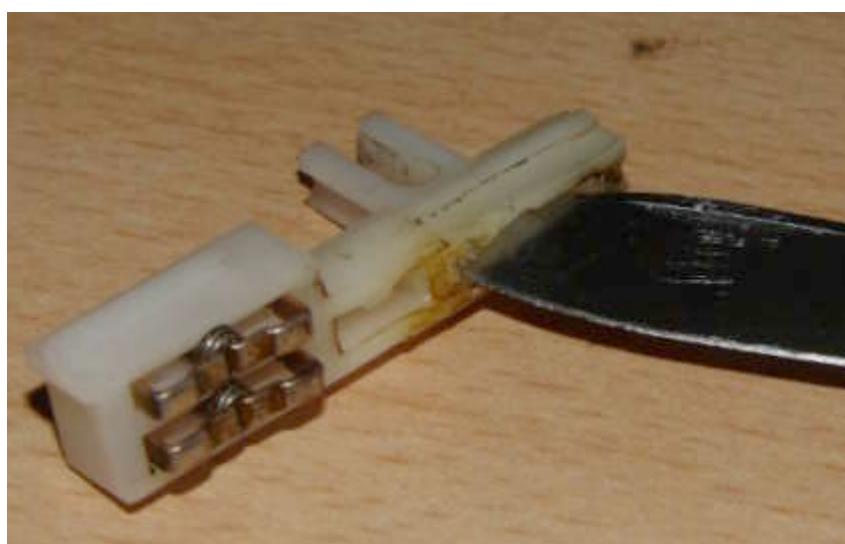


Once you have done that, extend the spring and put all back in

This file is for private use only, no hosting on web sites is allowed. The file is

Kada je to gotovo, rastegnite oprugu i vratite sve natrag


**WHEN CUTTING THE MELTED PART – DO NOT CUT THE TEATH (ARROW) IN THE CORNER, IT HOLDS THE CONTACT SO IT WONT SPRING OUT
KADA REŽETE PLASTIKU – NEMOJTE ODREZATI DIO PLASTIKE KOJI SE NALAZI U KUTU (STRELICA) JER ON DRŽI KONTAKT NA MJESTU DA NE MOŽE ISKOČITI**

When that is done you will again have this (all are sticking out)
Kada je to gotovo, opet ćete imati ovo (svi kontakti strše prema van)

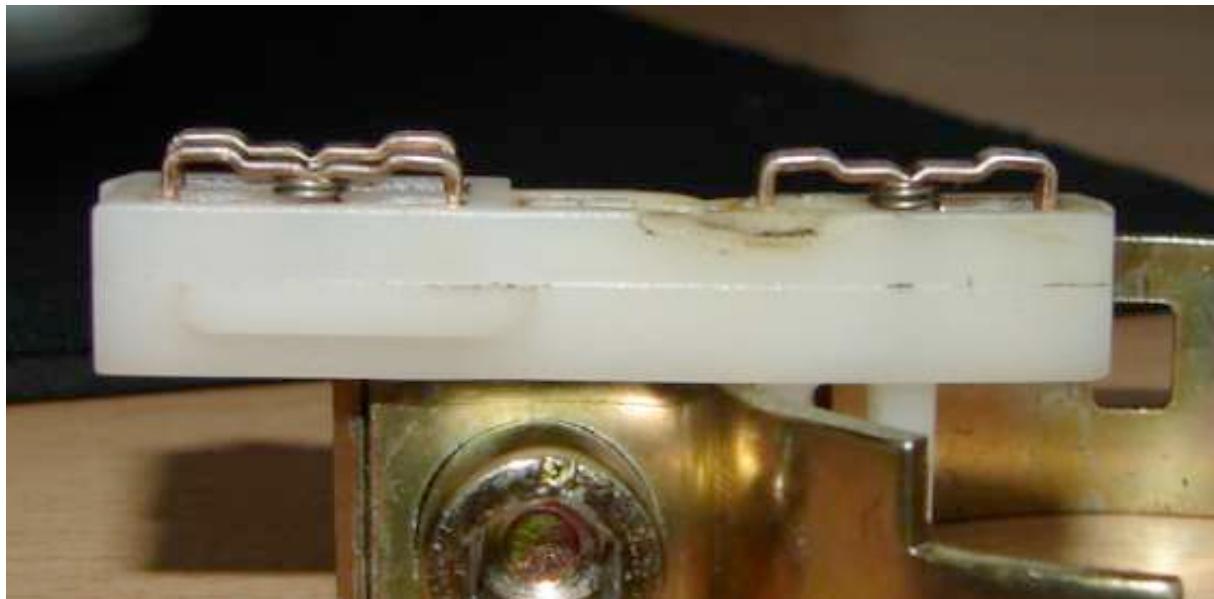

Now do the same process of expanding the springs on ALL other components, like for example on the pic, so it wont happen on other parts.

Sada naparavite isti proces rastezanja opruge na SVIM ostalim djelovima, kao ovaj na slici, tako da se ista stvar ne dogodi na drugim djelovima.


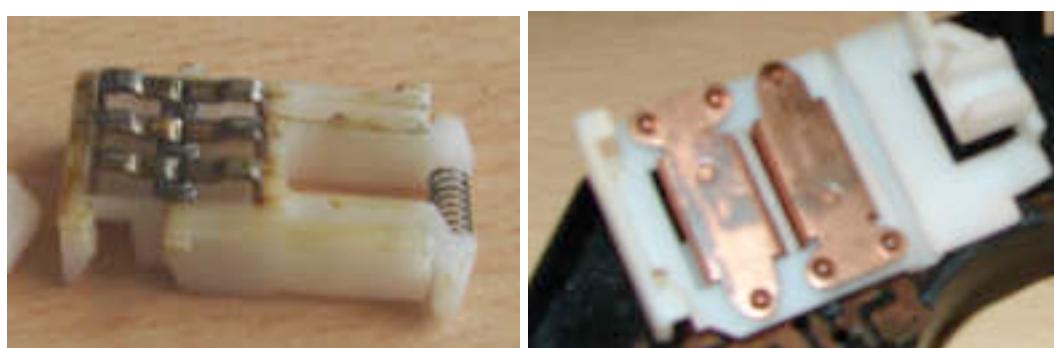


When that is done, put in all the sliders
Kada je to gotovo vratite sve klizače natrag.

This file is for private use only, no hosting on web sites is allowed. The file is

REASSEBLYNG THE STALK PONOVNO SASTAVLJANJE KUČIŠTA

To complete the stalk, you must put the levers back in there places.
The tricky and most important part is, that the in side lever (yellow arrow) sits on its place (red arrow) on both of the main levers.

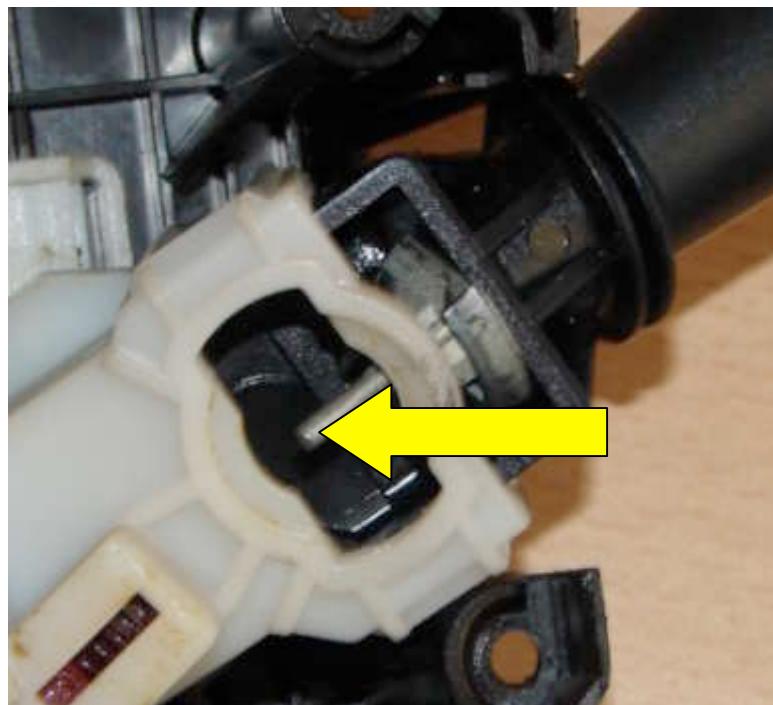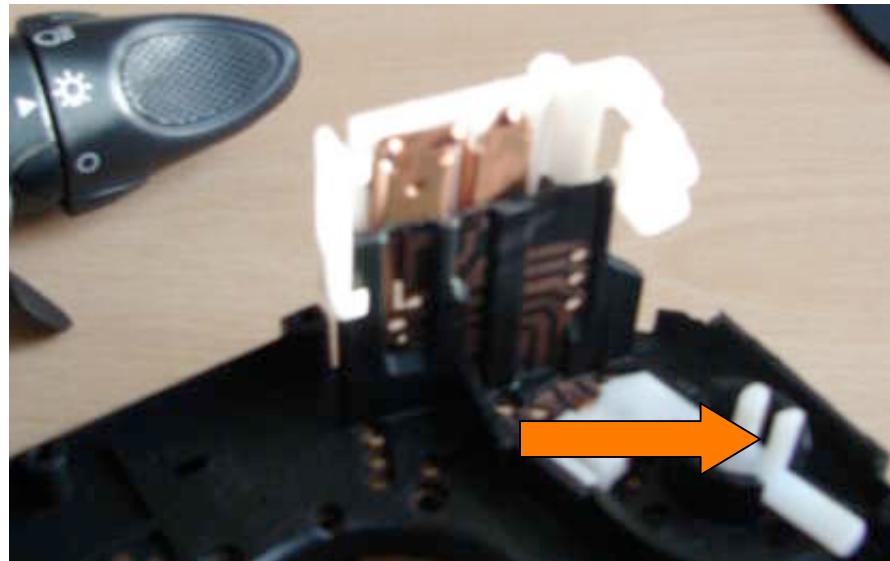


Da bi završili posao i počeli metati poklopac, potrebno je sve umetnuti u svoja mesta. Posebnu pozornost treba obratiti na polugicu ručice (žuta strelica) i utor klizača (crvena strelica). Polugica mora sjesti u utor.

Now do the same on the opposite side.
Sada taj isti postupak napravite na suprotnoj strani.

This file is for private use only, no hosting on web sites is allowed. The file is

When that is aligned, put back in the cover and align the levers to fit in these holes (white arrows)

Kada je sve postavljeno, postavite poklopac i postavite ove klinove da uđu u utore na kučištu (bijele strelice)

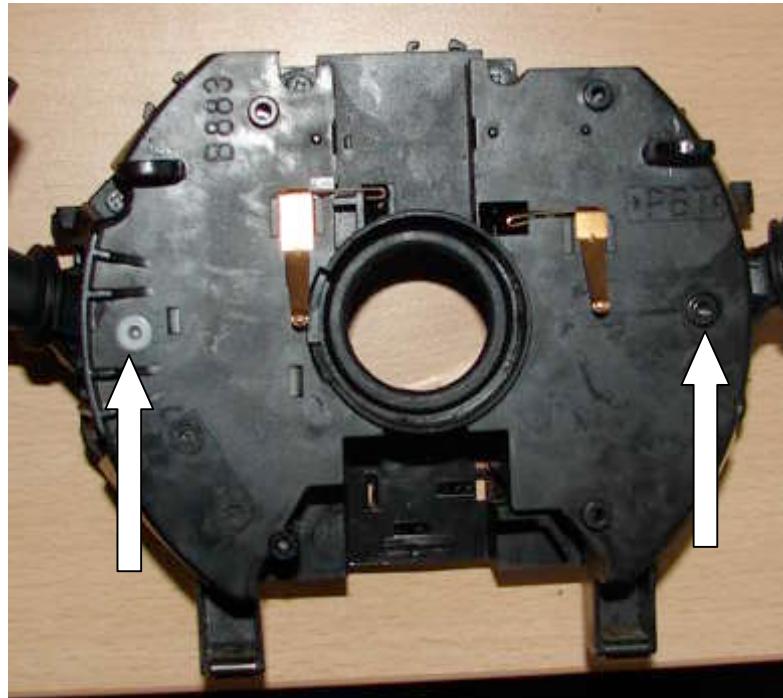

The cover is secure on, when you hear the clips take hold of the down part of the housing.

Poklopac je sigurno zatvoren kad se čuje "klik" zvuk da su kvačce donjeg dijela kučista uhvaile.

Now put the screws back in and the round clip back on and your done. ☺
Sada vratite vijke i prsten i gotovi ste ☺

If you extended ALL of the springs and the contact on the melted plastic is now free to move, the stalk wont be a problem for a long time to come. If you didn't extend all of the springs, it may happen that one or several function go with time for the same reason.

Ako ste rastegnuli SVE opruge i kontakt pločica na komadu rastopljene plastike se sad slobodno kreću, ne bi trebalo biti više problema dugo vrijeme. Ako niste rastegnuli sve opruge, isti problem se može javiti na drugim funkcijama, a uzrok bi bio isti.

This file is for private use only, no hosting on web sites is allowed. The file is